
NatureRails™ LLC
ARTISTIC RAILING & HOME DÉCOR


TECHNICAL SUPPORT
EMAIL: info@naturerails.com

RETROFIT INSTALLATION GUIDE: Decorative Panels with Welded Flat-Bar for Spindle Replacement


EXISTING WOOD SPINDLE SETUP (front view)

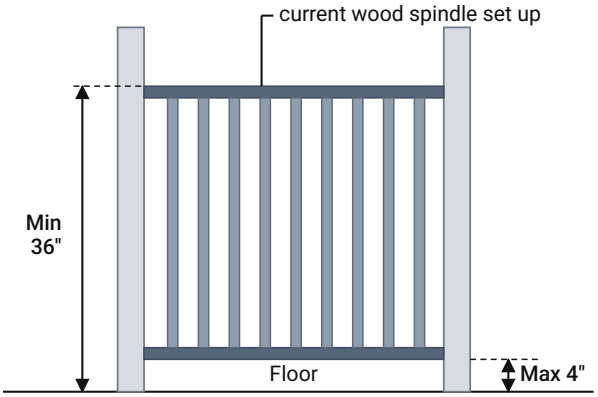


PANEL WITH FLAT-BAR (top & bottom)

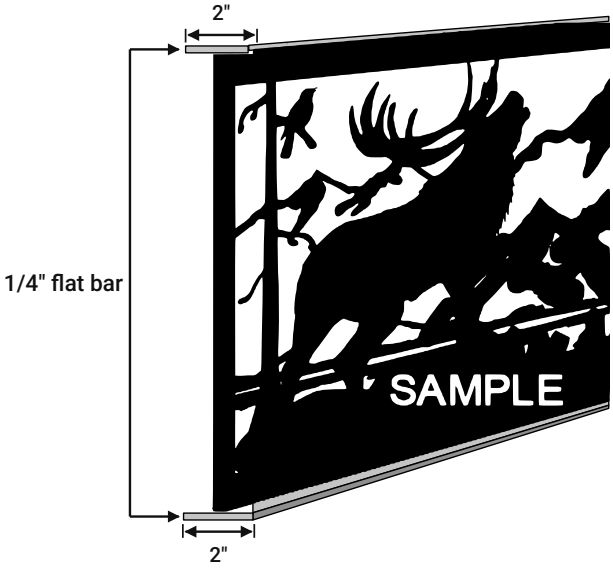

INSTALLED (retrofit into existing wood rails)

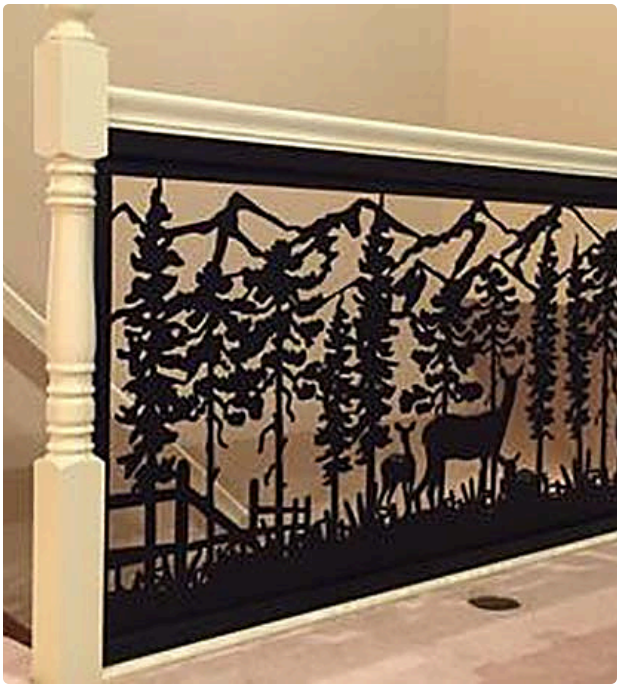

MOUNTING TO EXISTING RAILS (front view)

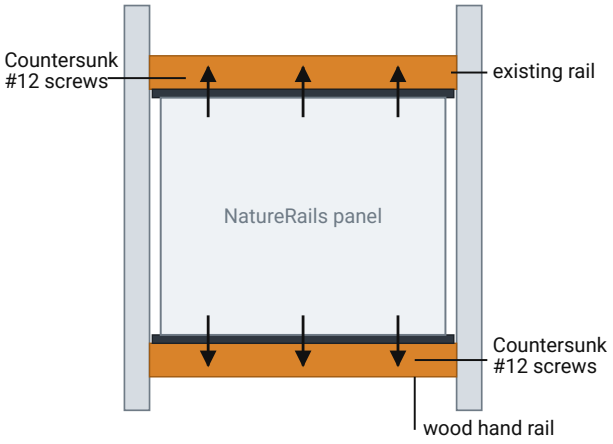

NOTES

- All designs meet **4" code compliance**.
- Customer is responsible for final installation & local requirements.
- Flat-bar added top & bottom with holes on 1 side only. **Hardware #12 included.**